



INSTRUCTION REF: IN149

ISSUE No. 1

DATE 22.03.07

Page 1 of 17

TELEPHONE:

SERVICE (44) 01332 875665

FAX:

SERVICE (44) 01332 875536

- INSTALLATION INSTRUCTIONS
- SAFETY INSTRUCTIONS
- USER INSTRUCTIONS

## STEAM COMBI OVEN

MODEL : TEC 6MD ELECTRIC 6 GRID

MODEL : TEC 10MD ELECTRIC 10 GRID



INSTRUCTION REF: IN149

ISSUE No. 1

DATE 22.03.07

Page 2 of 17

TELEPHONE:  
FAX:

SERVICE (44) 01332 875665  
SERVICE (44) 01332 875536

## SITE PREPARATION

- REMOVE THE PROTECTIVE PLASTIC COATING FROM THE OVEN
- CLEAN UNIT WITH SOAPY WATER
- 1 x WATER CONNECTION WITH  $\frac{3}{4}$  B.S.P. VALVE  
(UNIT SUPPLIED WITH 1 x Y PIECE CONNECTOR)  
(AND 2 x  $\frac{3}{4}$  B.S.P. HOSES)
- A DRAIN PIPE WITH TRAP – 1½” Dia (38mm)
- ELECTRICAL SUPPLY REFER TO TECHNICAL DATA
- PLEASE RECORD YOUR MACHINE SERIAL NO. HERE,  
THIS WILL HELP IN THE FUTURE FOR SERVICING.

SERIAL No. \_\_\_\_\_

DATE OF PURCHASE \_\_\_\_\_



TELEPHONE: SERVICE (44) 01332 875665  
FAX: SERVICE (44) 01332 875536

## **INSTALLATION**

1. Place the oven on a level surface allow a clearance between the wall and the unit of at least 5cm.  
N.B. The control panel should not be next to a heat source.

2. **ELECTRICAL CONNECTION**

- This unit must be installed by a qualified electrician.
- Your mains supply (voltage, current, fuse protection) must conform to technical data plate on unit.
- The supply voltage during operation must not vary from the normal voltage level by more than  $\pm 10\%$
- It is essential to earth the appliance using the terminal with the  $\perp$  symbol on the internal terminal block.

3. **WATER CONNECTION**

There are 2 x water connections at rear of the unit, these are connected by the 2 x hoses via the 1 x Y piece connector supplied.

### **IMPORTANT NOTE**

A water treatment unit must be fitted to the machine to avoid scale and harmful minerals to enter the cavity of the oven.

If your water contains more than 10ppm chlorides we recommend that it is fitted with a reverse osmosis unit. Failure to do so could cause deterioration of the cavity of your unit.

Failure to do so will affect the life span of the oven and it will invalidate your warranty.

4. **DRAIN CONNECTION**

A suitable tundish or receptacle should be used directly underneath the drain outlet allowing an air gap of at least 60mm.



TELEPHONE: SERVICE (44) 01332 875665  
FAX: SERVICE (44) 01332 875536

## **IMPORTANT INSTRUCTIONS – SAFETY**

Please read instructions before operating this appliance and retain for future use.

### **ALWAYS**

Ensure that hands are dry before handling the TEC 6 and 10 isolators or switching on the appliance.

Use the appliance on a secure dry level surface.

Allow adequate air space above and all sides for air circulation.

Isolate when not in use and before cleaning.

Allow to cool before cleaning.

Carry out regular checks of the supply cable to ensure no damage is evident. Should there be any signs that the cable is damaged in the slightest degree, the entire appliance should be isolated and a service engineer called.

### **NEVER**

Do not use this appliance outdoors.

Do not use this appliance for other than intended use.

Do not immerse the appliance or cable and plug in water or any other liquid to protect against electrical hazards.

Do not use harsh, abrasive or caustic cleaners to clean this appliance.

Do not allow children to use this appliance.

Do not let supply cable hang over the edge of a table or counter, touch hot surfaces or become knotted.

Do not place this appliance on or near a hot gas or electric burner or where it could touch a heated oven, air flow is essential.

Never touch hot surfaces.

Do not operate any appliance with a damaged cable or after an appliance malfunction or if it has been damaged in any manner.



**INSTRUCTION REF: IN149**

**ISSUE No. 1**

**DATE 22.03.07**

**Page 5 of 17**

**TELEPHONE: SERVICE (44) 01332 875665**

**FAX: SERVICE (44) 01332 875536**

Never block off the vents.

**MUST BE TAKEN TO PREVENT THE  
RISK OF BURNS, FIRES OR OTHER  
DAMAGE TO PROPERTY CAUSED BY  
TOUCHING THE SIDES OR TOP  
WHILST IN USE OR DURING COOLING.**

**CAUTION:**  
**THIS APPLIANCE GENERATES HEAT**  
**DURING USE. PROPER PRECAUTIONS**



TELEPHONE: SERVICE (44) 01332 875665

FAX: SERVICE (44) 01332 875536

### **CLEANING INSTRUCTIONS**

- Isolate the appliance from the electrical supply before carrying out any maintenance.
- Keep the oven clean.  
Do not wash the appliance with high pressure water jets.  
Do not use steel wool pads or metal scrapers, which could deposit small ferrous parts that might rust.  
The oven interior should be cleaned daily with particular attention to the fan area and shelf supports. Spray or apply a quality oven cleaner all over the interior of the oven. Particular care should be taken to protect hands, eyes and face and avoid breathing any fumes produced. Do not use detergent containing abrasives or caustic as these will damage the surface of your oven. Set oven to Super steam mode and allow it to run for 20 minutes before use.  
**CAUTION:** open the door very carefully avoiding steam as it contains substances which could be harmful to hands and eyes.
- **NEVER** operate the door with the internal glass unclipped from the main door as damage will occur.

### **PLEASE NOTE**

The following items will not be covered under warranty if the problems have been caused by:

1. Lime scale/Mineral deposit
2. Poor maintenance/cleaning of unit
  1. Fan Motors
  2. Elements

### **ITEMS NOT COVERED BY WARRANTY**


- **BULB**
- **BULB COVER/COVER SEAL**
- **GLASS**
- **RUBBER SEALS**



TELEPHONE:  
FAX:

SERVICE (44) 01332 875665  
SERVICE (44) 01332 875536

## CONTROL PANEL

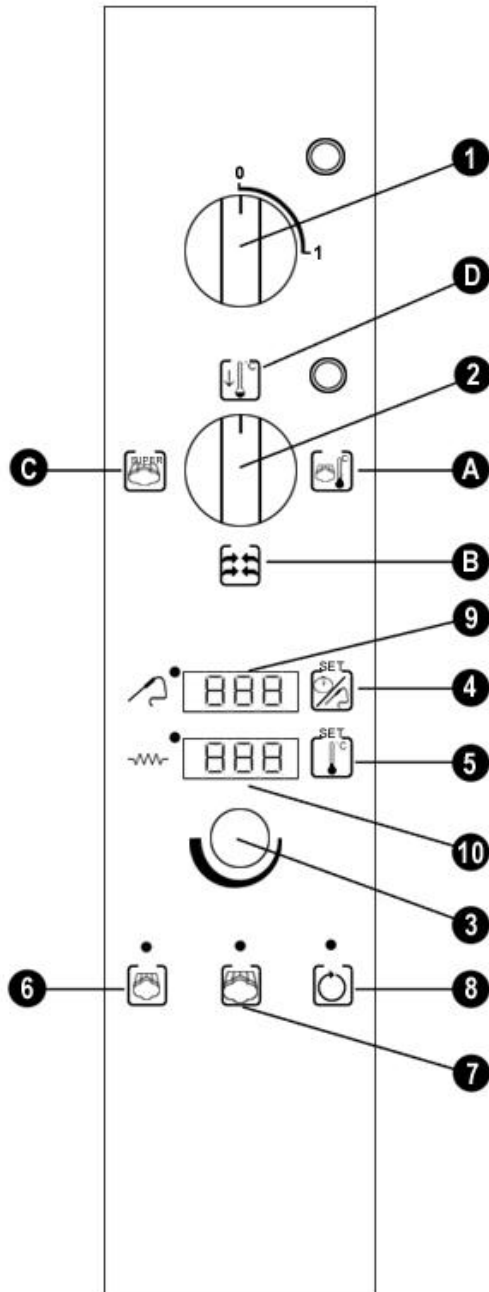

1. MAINS SWITCH

2. COOKING SELECTOR

- a) Combination cooking
- b) Convection cooking
- c) Super Steam cooking
- d) Cooling mode

3. INCREASE/DECREASE  
OF SELECTED VALUES.

4. TIME/PROBE SET

5. TEMPERATURE SET

6. STEAM ADDITION

7. REGENERATION

8. CYCLE START

9. DISPLAY 1

10. DISPLAY 2




TELEPHONE: SERVICE (44) 01332 875665  
FAX: SERVICE (44) 01332 875536


## USER INSTRUCTIONS

### TEC 6 AND TEC 10





#### SWITCH ON

- TURN MAINS SWITCH TO POSITION 1
- WAIT 5 SECONDS BEFORE SELECTING THE COOKING FUNCTIONS
- PRESS START/STOP CYCLE BUTTON  TO SET COOKING TEMPERATURE AND TIME.

#### \*NOTE\*

- TO STOP THE COOKING CYCLE AT ANY TIME PRESS START/STOP CYCLE BUTTON 

#### CONVECTION COOKING "DRY HEAT COOKING WITH FAN"

- SELECT CONVECTION COOKING MODE  BY TURNING THE MODE SELECTION KNOB
- PRESS TEMPERATURE SET BUTTON  AND WITH ADJUSTMENT DIAL AND SELECT REQUIRED TEMPERATURE. (See item 3 on the control panel key guide) (PRE-SET 250°C) (20 – 270°C)
- PRESS TIME SET BUTTON  AND WITH DIAL WITH ADJUSTMENT DIAL SELECT COOKING DURATION (MIN 1 – MAX 240 MINS) OR LEAVE SET ON P (PERMANENT) PRESS START/STOP CYCLE BUTTON  TO START.

#### IMPORTANT

PRESS REGENERATION BUTTON  FOR REGENERATION OF FOOD







**TELEPHONE: SERVICE (44) 01332 875665**





**FAX: SERVICE (44) 01332 875536**

- WHEN USED ONLY ONE INJECTION OF STEAM WILL BE INJECTED INTO OVEN.



### CONVECTION WITH STEAM

- DURING THE CONVECTION COOKING MODE  PRESS STEAM ADDITION BUTTON  TO SELECT THIS OPTION.

### COMBINATION COOKING (STEAM) WITH ADJUSTABLE TEMPERATURE

- SELECT COMBINATION COOKING MODE  BY TURNING THE MODE SELECTION KNOB
- PRESS TEMPERATURE SET BUTTON  AND WITH ADJUSTMENT DIAL SELECT REQUIRED TEMPERATURE. (See item 3 on the control panel key guide) (PRE-SET 250°C) (20 – 270°C)
- PRESS TIME SET BUTTON  AND WITH DIAL WITH ADJUSTMENT DIAL SELECT COOKING DURATION (MIN 1 – MAX 240 MINS) OR LEAVE SET ON P (PERMANENT) PRESS START/STOP CYCLE BUTTON  TO START.

### SUPER STEAM COOKING

- SELECT COMBINATION COOKING MODE  BY TURNING THE MODE SELECTION KNOB.
- PRESS TIME SET BUTTON  AND WITH DIAL WITH ADJUSTMENT DIAL SELECT COOKING DURATION (MIN 1 – MAX 240 MINS) OR LEAVE SET ON P (PERMANENT)

### IMPORTANT




IT IS NOT NECESSARY TO SET THE TEMPERATURE, THE UNIT IS PRE-SET AT 95°C.

- PRESS START/STOP CYCLE BUTTON  TO START.








TELEPHONE: SERVICE (44) 01332 875665  
FAX: SERVICE (44) 01332 875536

### COOLING MODE

- SELECT COMBINATION COOKING MODE  BY TURNING THE MODE SELECTION KNOB.
- PRESS TEMPERATURE SET BUTTON  AND WITH ADJUSTMENT DIAL SELECT REQUIRED TEMPERATURE. (See item 3 on the control panel key guide) (PRE-SET 0°C) (0 – 100°C)
- PRESS START/STOP CYCLE BUTTON  TO START

### COOKING WITH CORE PROBE

- CONNECT PROBE TO THE SOCKET LOCATED AT FRONT RIGHT CORNER UNDER CONTROL PANEL
- SELECT THE DESIRED COOKING MODE 
- PRESS AND HOLD TIME SET BUTTON  FOR 5 SECONDS. DISPLAY (NUMBER 1) WILL SHOW ACTUAL TEMPERATURE OF PROBE AND PROBE INDICATOR LIGHT WILL ILLUMINATE.
- PRESS TIME SET BUTTON  AGAIN TO SET TEMPERATURE PROBE. (PRE-SET AT 100°C) WITH ADJUSTMENT DIAL SELECT REQUIRED TEMPERATURE. (See item 3 on the control panel key guide) (20 – 270°C)
- PRESS TEMPERATURE SET BUTTON  AND WITH ADJUSTMENT DIAL SELECT REQUIRED TEMPERATURE. (See item 3 on the control panel key guide) (PRE-SET 250°C) (20 – 270°C)
- PRESS START/STOP CYCLE BUTTON  TO START



TELEPHONE: SERVICE (44) 01332 875665  
FAX: SERVICE (44) 01332 875536

- WHEN THE PRE-SET CORE TEMPERATURE IS REACHED THE OVEN WILL SWITCH OFF COOKING MODE.
- BEFORE REMOVING THE PROBE FROM THE SOCKET, PRESS AND




HOLD TIME SET BUTTON FOR 5 SECONDS. PROBE INDICATOR LIGHT WILL TURN OFF AND DISPLAY WILL SHOW "P" OR PRESET TIME

### TECHNICAL DATA

	TEC 6MD	TEC10MD
VOLTAGES	SINGLE 230v AC 3 PHASE 400v AC	SINGLE 230v AC 3 PHASE 400v AC
CAPACITY	6.7KW	13.4KW
AMPS	SINGLE 30 NOMINAL 3 PHASE 13.2 NOMINAL PER PHASE	SINGLE 59 A NOMINAL 3 PHASE L1 PHASE 13.2 A L2 PHASE 13.2 A L3 PHASE 27.0 A

### WIRING DIAGRAM – IMAGE OF ELECTRICAL BLOCK

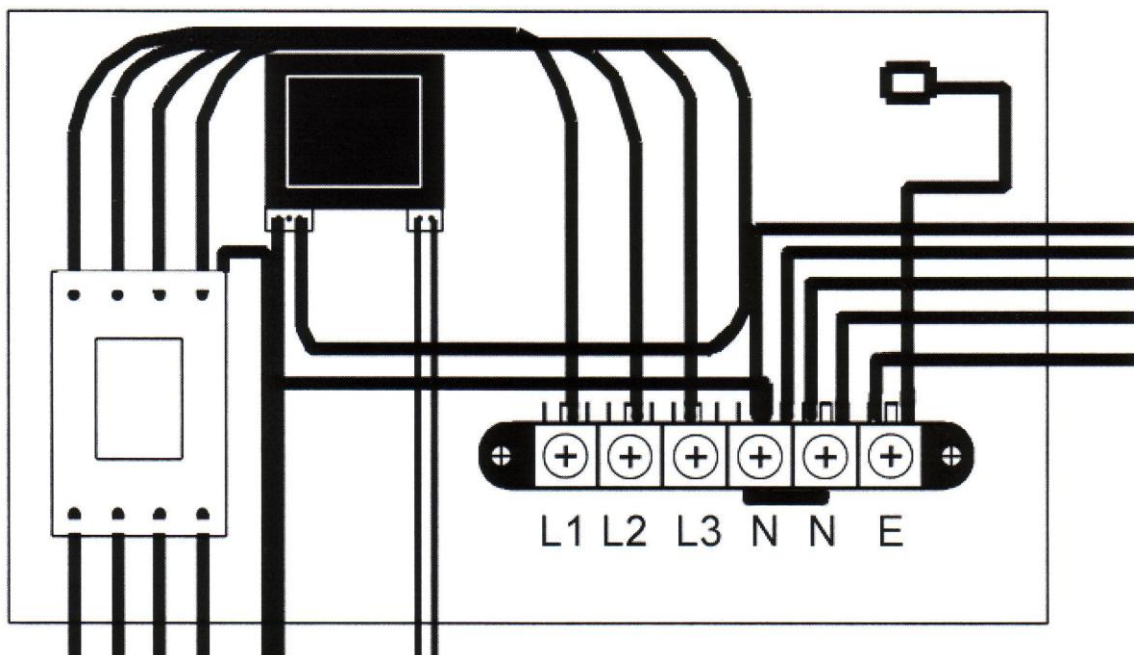





TELEPHONE:  
FAX:

SERVICE (44) 01332 875665  
SERVICE (44) 01332 875536

### TEC 6 MD

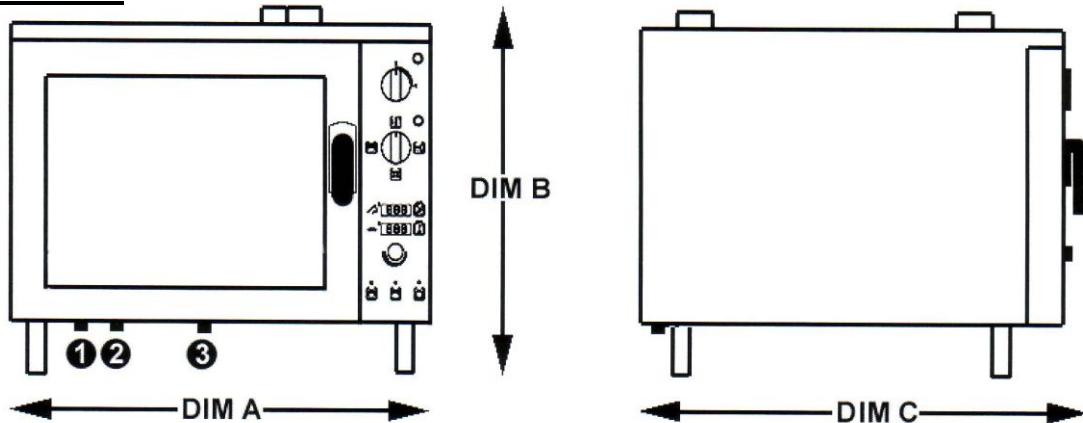

### TEC 10 MD

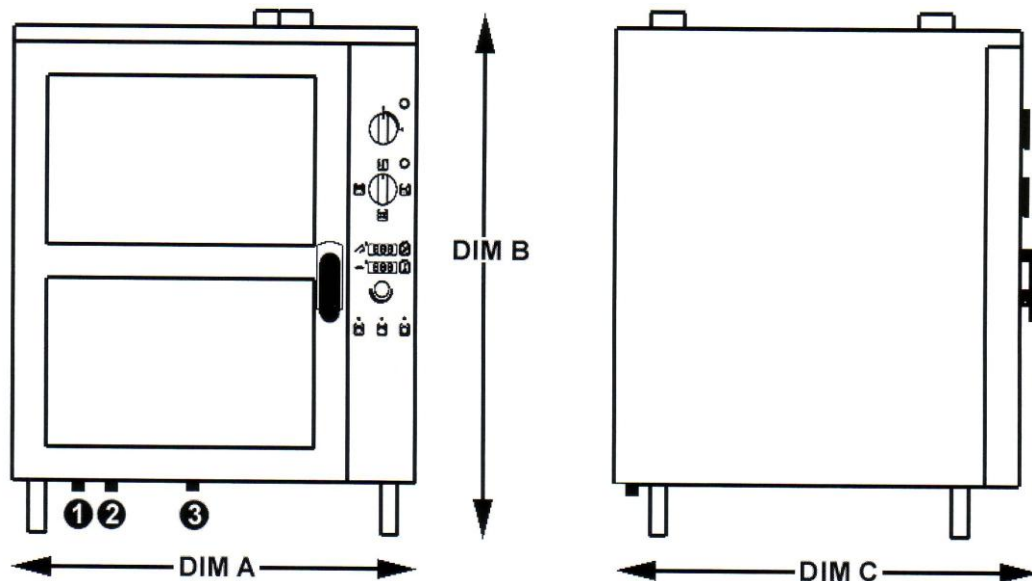


	TEC 6MD	TEC 10MD
<b>WATER OUTLET PRESSURE</b>	2 bar min 6 bar max	2 bar min 6 bar max
<b>WATER CONNECTION</b> Inlet (1) For Cooling Inlet (2) For Steam Injection	2 x ¾ BSP	2 x ¾ BSP
Unit comes complete with 2 hoses + Y connector for use on one water supply		
<b>DRAIN (3)</b>	32mm	32mm
<b>DIMENSIONS</b> Dim A Dim B Dim C	900 770 778	900 1220 778
<b>WEIGHT</b>	80 Kg	115 Kg



TELEPHONE:  
FAX:

SERVICE (44) 01332 875665  
SERVICE (44) 01332 875536

### TEC 6 MD

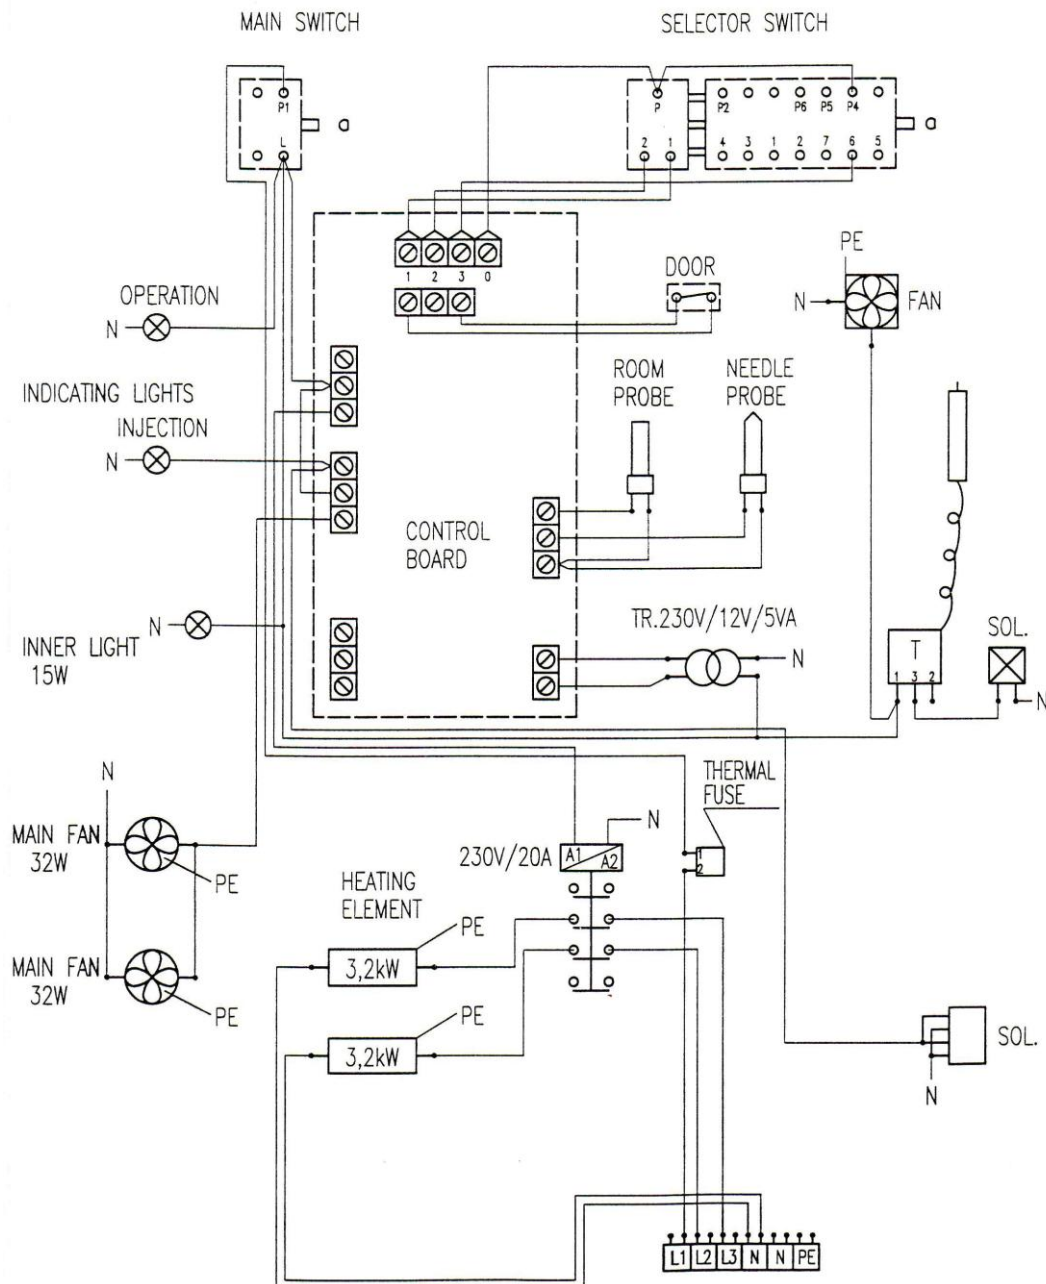




TELEPHONE:  
FAX:

SERVICE (44) 01332 875665  
SERVICE (44) 01332 875536

TEC 10 MD

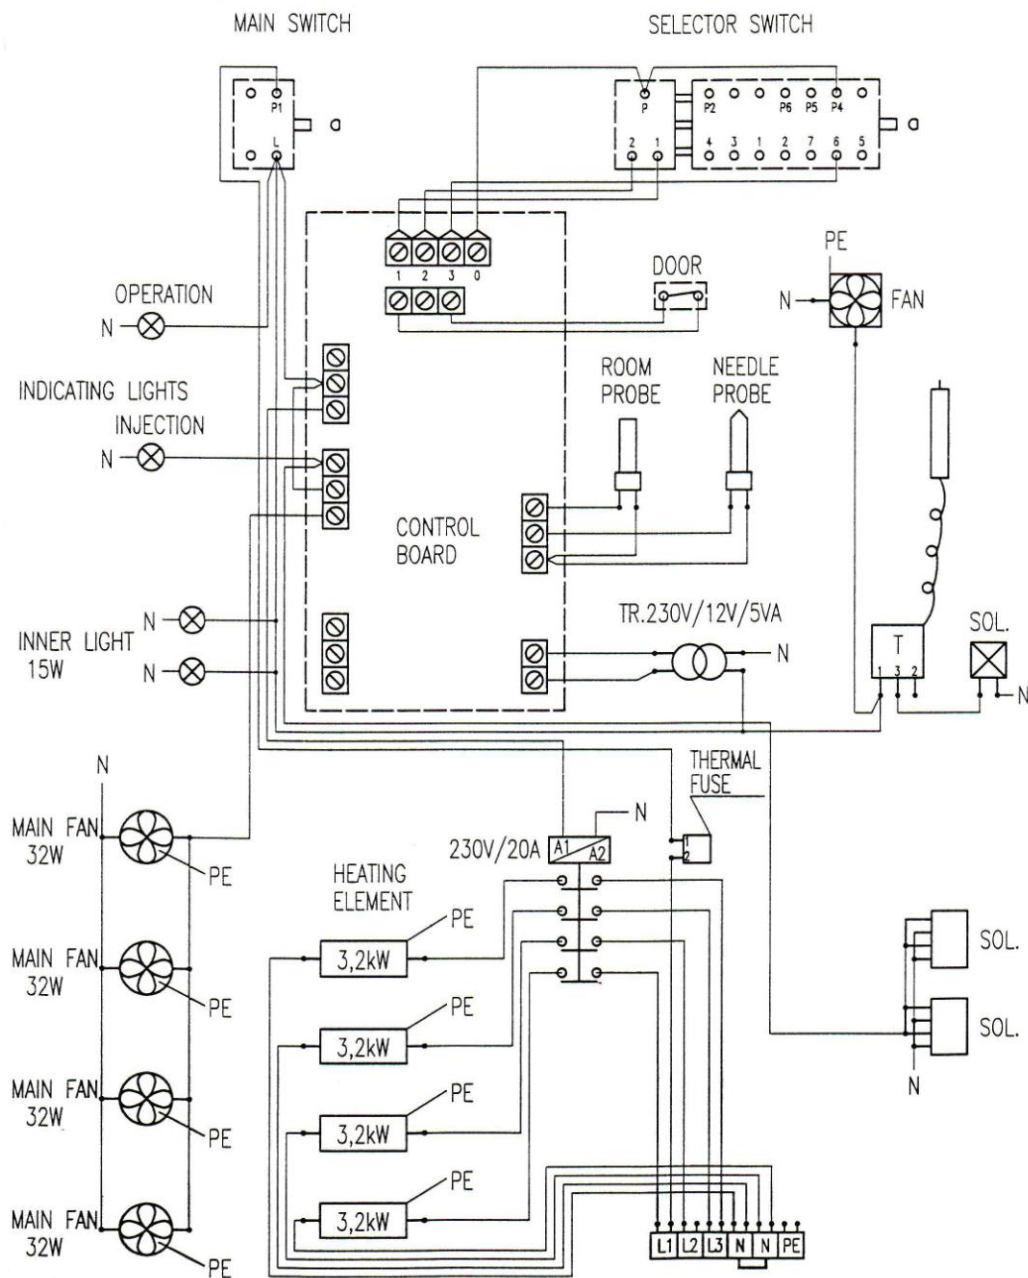





TELEPHONE:


SERVICE (44) 01332 875665

FAX:

SERVICE (44) 01332 875536

YOUR DISTRIBUTOR WILL BE ABLE TO GIVE YOU THE NAME AND  
TELEPHONE NUMBERS OF THE SERVICE AGENTS IN YOUR AREA.

## TEC 6MD SPARE PARTS

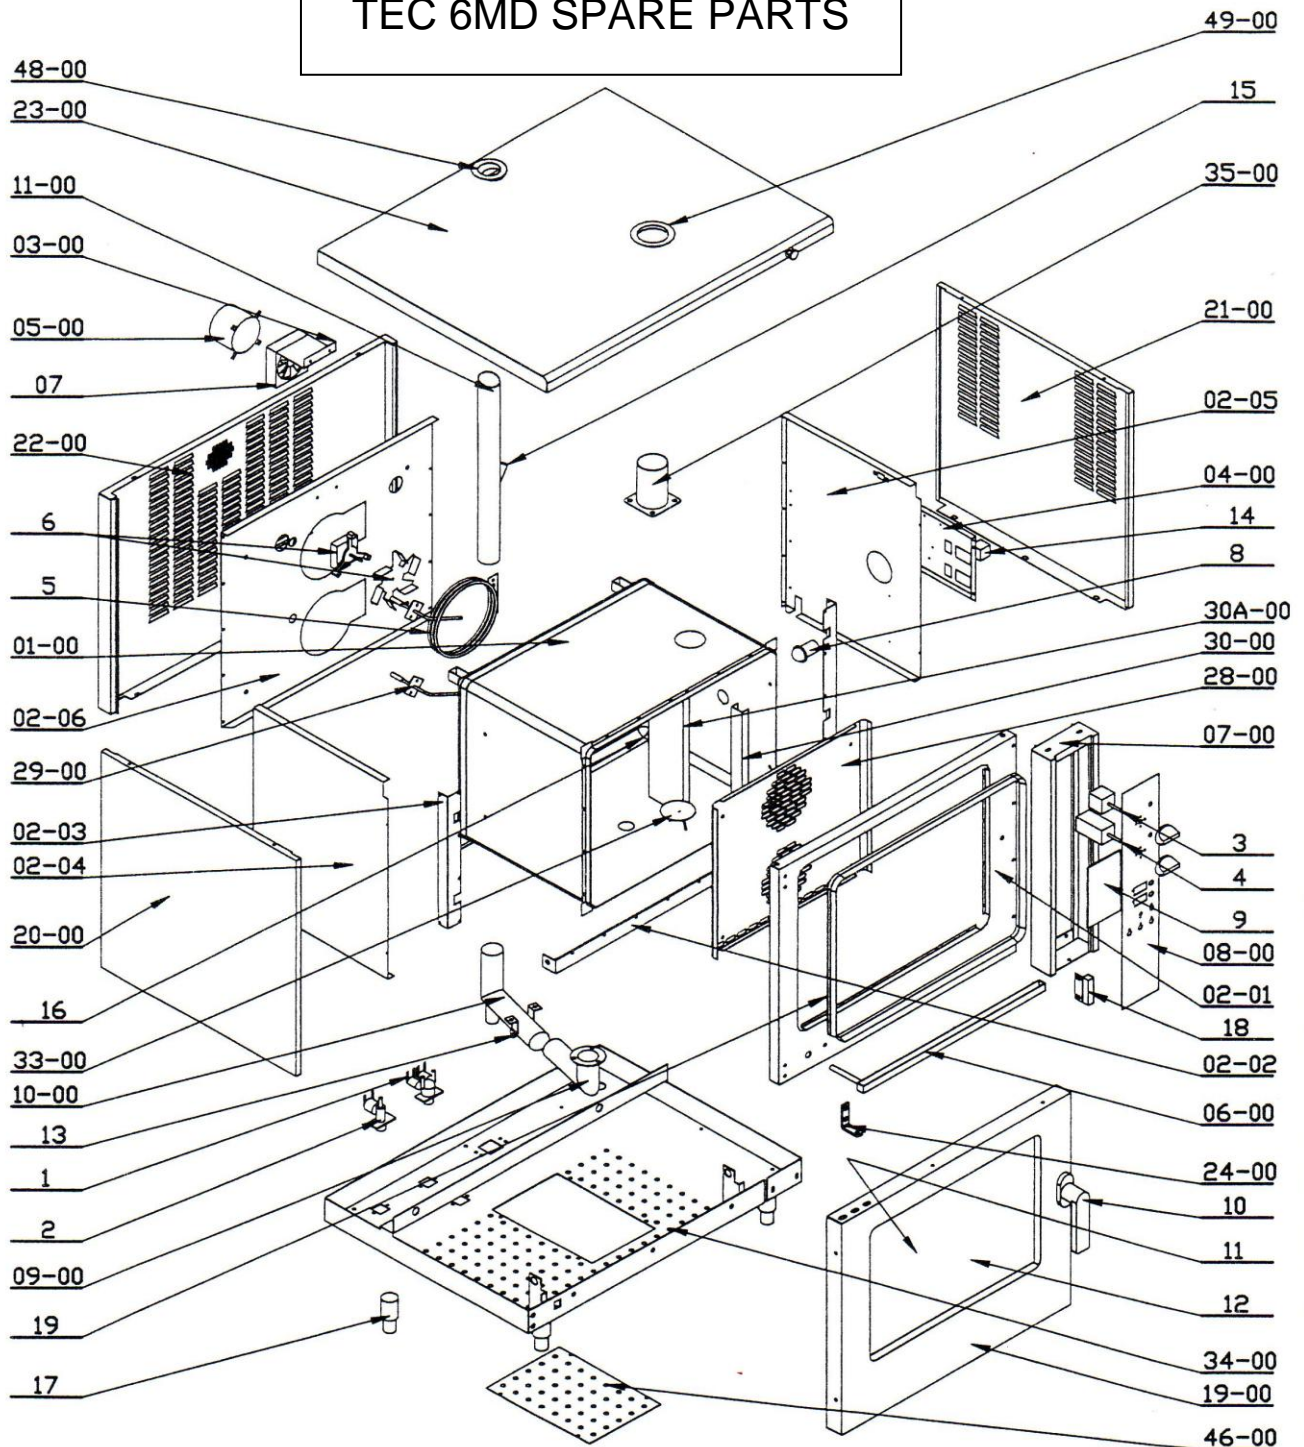

- 1-Solenoid valve 0.1l/min 230V
- 2-Solenoid valve 0.5l/min 230V
- 3-Main switch
- 4-Selector switch
- 5-Heating element 3.3 kW/230V
- 6-Inner fan
- 7-Fan
- 8-Light
- 9-Control board
- 10-Handle

- 10-Handle
- 11-Inner glass
- 12-Outer glass
- 13-Cooling nozzle
- 14-Thermostat
- 15-Cooling sensor
- 16-Chamber probe
- 17-Foot
- 18-Door magnetic switch
- 19-Door gasket



INSTRUCTION REF: IN149

ISSUE No. 1

DATE 22.03.07

Page 16 of 17


TELEPHONE:

SERVICE (44) 01332 875665

FAX:

SERVICE (44) 01332 875536

## TEC 10MD SPARES PARTS

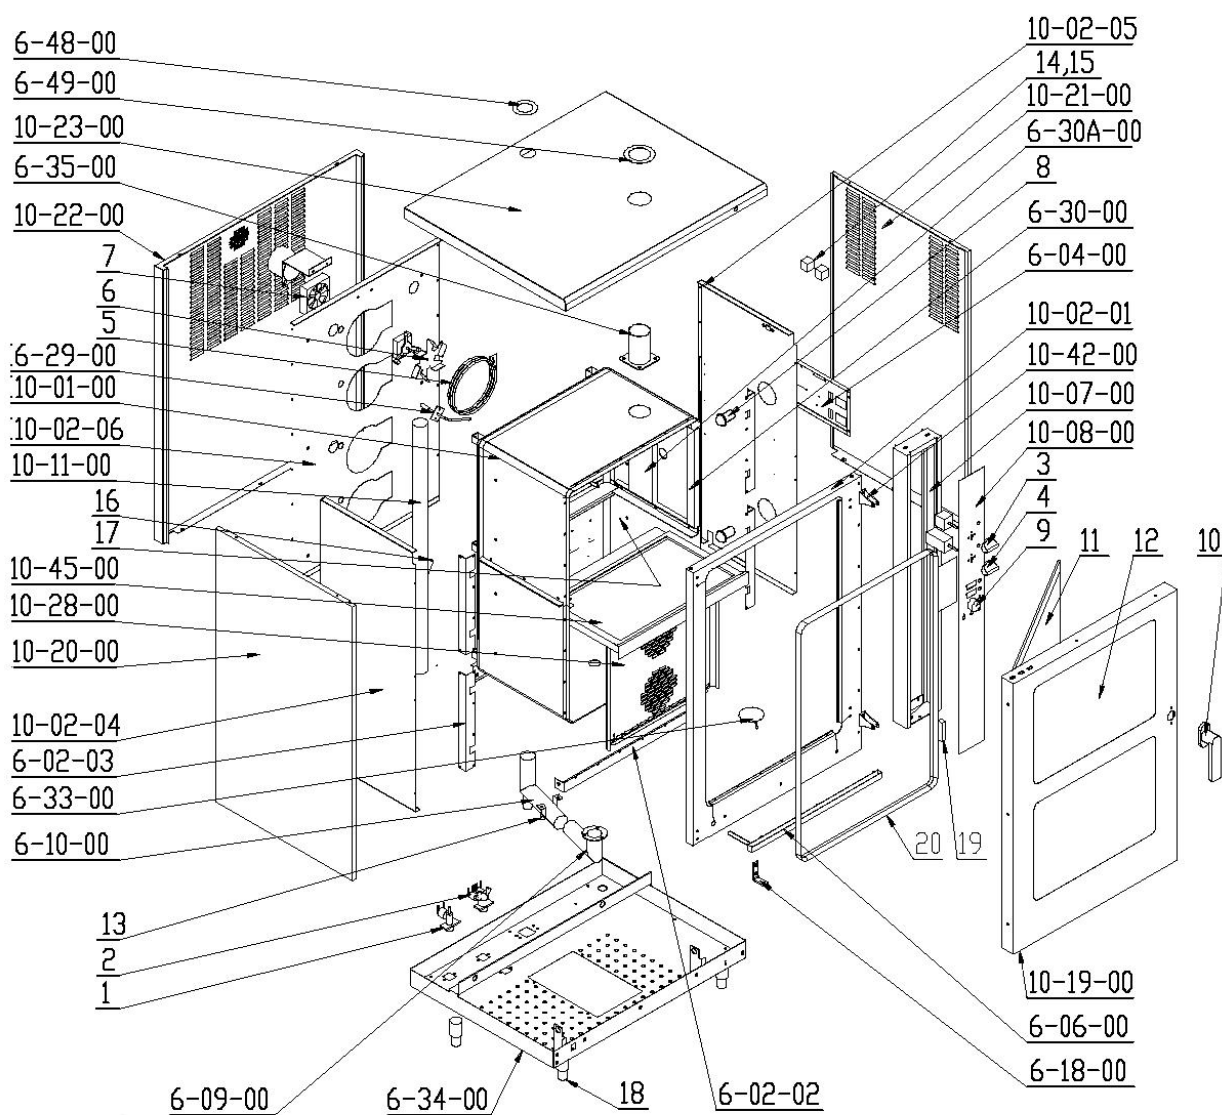





**INSTRUCTION REF: IN149**

**ISSUE No. 1**

**DATE 22.03.07**

**Page 17 of 17**

**TELEPHONE: SERVICE (44) 01332 875665**

**FAX: SERVICE (44) 01332 875536**

1-Solenoid Valve I  
2-Solenoid Valve II  
3-Main Switch + Knob  
4-Selector Switch + Knob  
5 Heating Element 3.3 kW/230V  
6-Inner Fan  
7-Fan  
8-Light 230v/15w 300°C  
9-Control Board + Knob  
10-Handle

11-Inner Glass  
12-Outer Glass  
13-Cooling Nozzle  
14-Thermostat  
15-Safety Thermostat  
16-Cooling Sensor  
17-Chamber Probe  
18-Foot  
19-Door Magnet Switch  
20-Door Gasket